



Installation and Operating Manual

IK9055WE

50cm A+/F Combi Fridge Freezer



**Please read these instructions carefully before attempting to install or use this appliance.
It is advisable to keep these instructions in a safe place for future reference.**

Introduction

Thank you for choosing this ICEKING appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference. Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations by a qualified electrician.

After unpacking the appliance ensure that there is no visible damage. If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new **Iceking** appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee:

Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.

Any appliance that is used for anything other than domestic purposes.

Any defect caused by accident, misuse, unauthorized modification or inexperienced repair.

Cost of Call-out where a fault cannot be found with the appliance.

Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.

Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.

Use of the appliance by anyone other than the Householder. Use in any commercial environment.

Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.

Repair costs incurred that have not been authorised by Repairtech and/or carried out by a non-approved Repairtech engineer.

YOUR GUARANTEE IS VALID ONLY IN THE UK.

To Register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or *Alternatively* you can Register online at www.repairtechuk.com

 
SERVICE HELP-LINE

Should your appliance develop a fault, please call the Repairtech Service Helpline on:

01527-888133

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault. Your service call cannot progress without this information.

Description of the Appliance

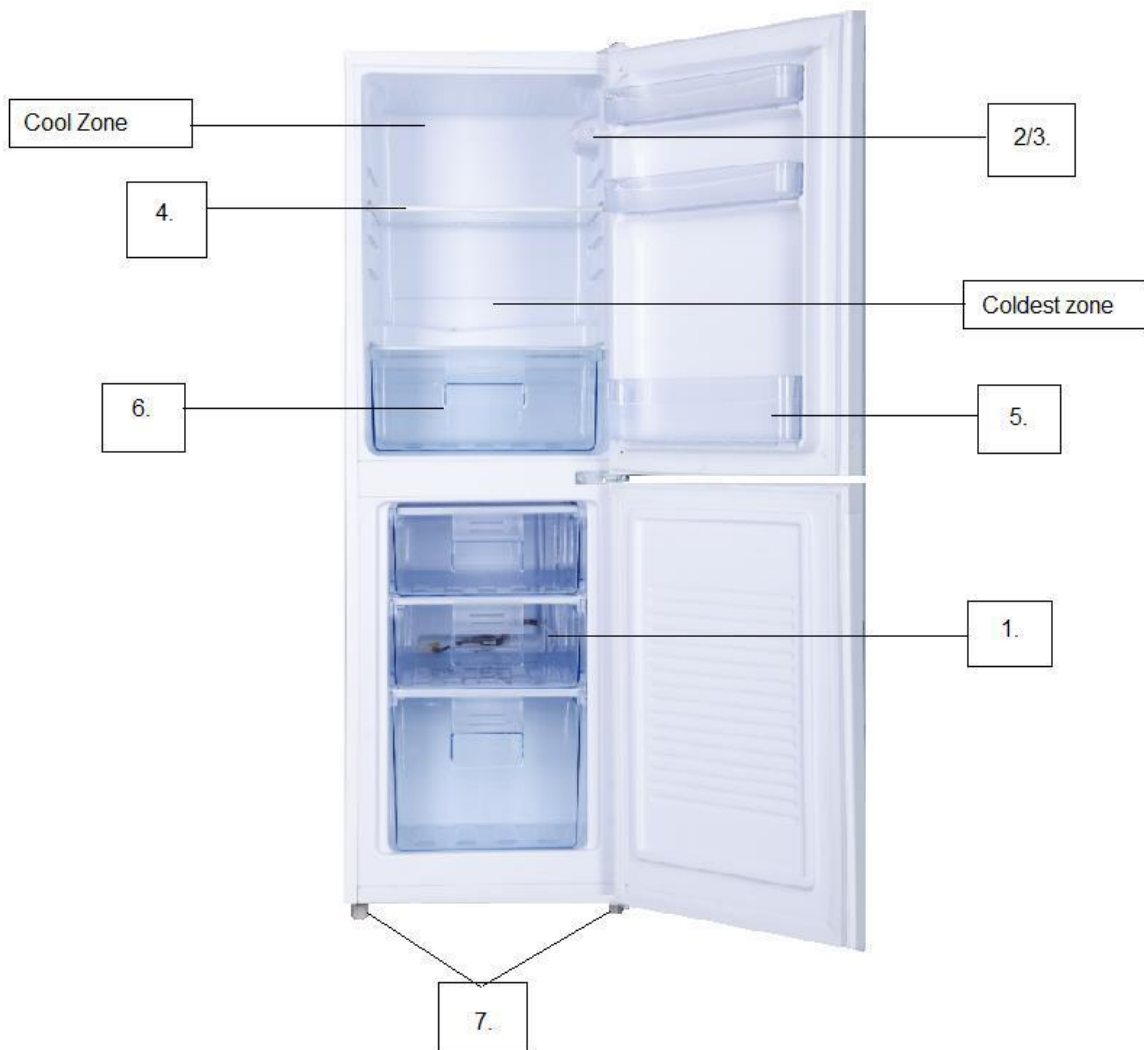

- 1. Freezer Compartment & Drawers**
- 2. Thermostat Control**
- 3. Interior Light**
- 4. Interior Glass Shelf**
- 5. Door Storage – Specific Areas for Bottles & Dairy Products**
- 6. Salad Crisper Box with Glass Shelf**
- 7. Two Levelling Feet**

Please note that your appliance may be supplied with the doors left or right hand hinged. To reverse the doors please refer to section 4.6.

(Picture shown for indicative purposes only, model supplied may differ).

CONTENTS:

Section 1. Safety Advice

Section 2. Installation

Section 3. Operating the Appliance

Section 4. Maintenance

Section 5. Disposal and recycling of product

Section 1. Safety Advice



**THIS PRODUCT IS STRICTLY FOR
HOUSEHOLD USE ONLY!**

Please read these instructions carefully before the first use of this product and save this manual for your future reference.

This appliance is intended strictly for storing food only. If the appliance, when unpacked, is damaged please contact your retailer.

The mains electricity supply must conform to the rating plate of the appliance.

PLEASE TAKE NOTE OF FIRE WARNING SYMBOL; ISO 7010 W021



WARNING!

When using, servicing and disposing of the appliance, please pay attention to the symbol as seen above, this is located on the rear of the

appliance (rear panel or compressor). This is a 'risk of fire warning symbol'. There are flammable materials in refrigerant pipes and compressor. Please ensure appliance is far away from any fire source when using, servicing or disposing.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Children aged from 3 to 8 years of age are allowed to load and unload Refrigeration appliances.
- Cleaning and user maintenance shall not be made by children without supervision.
- The appliance must be positioned so that the plug is accessible.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Keep the appliance power cord out of the reach of children under 8 years of age.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance, for flammable refrigerants is used in the freezer, please be careful when installing, handling, servicing and recycling the appliance.
- A switch is built into those appliances fitted with lighting. When the appliance door is opened the light comes on automatically and is switched off automatically when closed.
- Regulations require the appliance to be earthed.
- It is recommended to check the supply cable regularly for any sign of deterioration, the appliance should not be used if the cable is damaged.
- Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance.
- This appliance is fitted with an earthed plug. Please ensure that the wall socket in your house is well earthed.
- Make sure the appliance is turned off and unplugged before performing any cleaning or maintenance operations.
- Clean all surfaces that come into contact with food regularly with warm soapy water.
- Do not leave the door open for long periods as this will cause the temperature inside the cabinet to rise and adversely affect the operation of the product.
- Raw meat and fish should be stored in suitable containers and kept on different shelves.
- Two and Three star rated frozen food compartments are suitable for storing pre-frozen food, ice cream and for making ice cubes. They are not suitable for freezing fresh produce.
- This appliance is intended to be used in household and similar applications such as:
 - o Staff kitchen areas in shops, offices and other working environments with no more than six staff members.
 - o By clients in hotels, motels and other residential type environments in individual rooms.

Please note that this appliance is not designed for use in a garage or out-house. The climate class specifies an ambient temperature of N/ST (+16°C - +38°C) meaning that this appliance is designed to be sited in the temperatures shown above.

Section 2. Installation

- **IMPORTANT!** This appliance must be left to stand in an upright position for at least 4 hours before being switched on for the first time.
- This appliance has been designed for Domestic Use Only.
- Remove all packaging and securing tape from the appliance.
- Wash the interior of the appliance with lukewarm water containing a small amount of bicarbonate soda (5ml to 0.5 litres of water).
- Condensation or related problems such as rust are not covered under the manufacturers guarantee!
- If you site this appliance in a very warm room/environment, i.e. conservatory, the motor may run continuously and the required temperature may not be achieved inside the cabinet(s).
- Position the appliance in a dry atmosphere and out of direct sunlight.
- Do not position next to a cooker or other source of heat, i.e. radiator.
- Leave a minimum gap of 10cm between the appliance and surroundings in order to avoid condensation.
- Do not place or store heavy items on the top of this appliance.
- Ensure that the appliance is positioned upright and on a firm flat floor.
- This appliance must be level.
- Connect the plug to an adjacent 13amp socket outlet and ensure that the appliance is not standing on the supply cable.

Rear spacers

The rear of your new appliance will have either an exposed condenser (Fig.1) or a concealed condenser, or a 'flat back' (Fig.2)

Your appliance may come supplied with spacers fitted to the rear or you may be supplied with two plastic spacers similar to those shown in Fig.3a or 3b. Fit these to the rear of the appliance as shown (Fig.3a & 3b). When fitted, the spacers will ensure an air gap between the condenser and the rear wall.

If your appliance does not come supplied with spacers fitted or you are not supplied with plastic spacers to fit yourself, ensure a gap of 50mm is maintained behind condenser and the rear wall.

Fig.1



Fig.2



Fig.3a


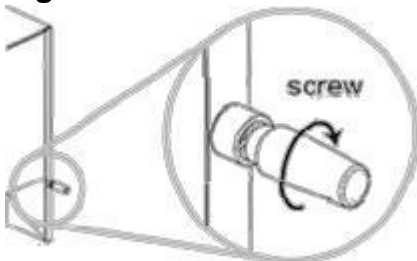 


Fig.3b

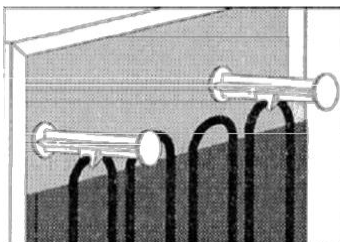 

Section 3. Operating the Appliance

3.1. Switching on the Appliance

- Allow the appliance to stand upright for a minimum of 4 hours before you switch it on.
- Plug in the appliance and switch on at the mains supply.
- Set the thermostat control to the required setting as detailed in the Temperature Control section (3.2.).
- Leave the appliance for approximately 4 hours for the correct temperature to be reached.

3.2. Temperature Control

The temperature selector knob is located on the right-hand side of the refrigerator interior (see Description of the Appliance on page 3).

Setting "0"	- Unit Off
Setting "1"	- Unit On – Warmest Temperature
Setting "3" to "4"	- Normal Operation (adequate for most situations)
Setting "7"	- Coldest Temperature

Important!

During high ambient temperatures e.g. on hot summer days, it may be necessary to set the thermostat to the coldest setting (position 7). This may cause the compressor to run continuously in order to maintain a low temperature in the cabinet.

3.3. Storing & Freezing Food in the Freezer

This appliance has a four-star freezer that is suitable for the long-term storage of frozen food items. It can also be used for freezing and storing fresh food items.

You should always follow the storage guidelines printed on each food producers packaging however, the following information is provided as a general guide for the maximum storage life of frozen items:

Fresh Meat and Poultry	– up to 12 months
Cooked Meats	– up to 2 months
Fresh Fish	– up to 6 months
Fruit and Vegetables	– up to 12 months
Bread and Cakes	– up to 6 months

3.4. Normal Operating Sounds

You may hear faint gurgling or bubbling sounds when the refrigerant is pumped to the cooling system and through the coils or tubing at the rear of the appliance. When the compressor is in operation you may hear a slight whirring sound or pulsating noise. The thermostat controls the operation of the compressor, and you may hear a slight click as it cycles in and out.

3.5. Energy Saving Advice

- Locate the appliance in a cool well-ventilated room and make sure that the air vents are clear
- Try to avoid keeping the doors open for a long time, warm air will enter the cabinet and may cause a build-up of ice as well as affecting the energy consumption.
- Ensure there are no obstructions preventing the doors from closing properly.
- Ensure that the door seals are clean and there are no tears or splits. Keep the most perishable foods, (those with a short shelf-life, such as cooked meats), in the coldest part of the fridge.
- The Salad Crisper Box is the warmest part of your fridge and should be used for vegetables, salads and fruits etc. (see Description of Appliance on Page 2)
- Do not overload the fridge: the cooling air that circulates to keep the fridge cold gets blocked and pockets of warm air form.
- Do not put hot food into the fridge or freezer – let it cool down first.

3.6. In the Event of a Power Failure

If there is a power failure, keep the doors closed. When the power has been restored the appliance will start to operate but it may take some time to achieve the pre-set operating temperature. Check the condition of your stored food items and liquids.

Section 4. Maintenance

Before any maintenance or cleaning work is carried out, disconnect the appliance from the electricity supply.

4.1. Internal Cleaning

Clean the interior and accessories with warm water and bicarbonate of soda (5ml to 0.5 litre of water). Rinse and dry thoroughly. Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol.

4.2. External Cleaning

Wash the outer cabinet with warm soapy water. Do NOT use abrasive products. There may be sharp edges on the underside of the product, so care should be taken when cleaning. Once or twice a year dust the rear of the appliance and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause increased energy consumption.

4.3. Defrosting

The fridge compartment will automatically defrost itself. However, you will need to defrost the freezer periodically. When ice buildup in the freezer exceeds 3-5mm, empty the contents and switch off the appliance, leave the door open and allow the ice to melt. Place the frozen foods items in a cool-bag or wrap them in thick newspaper. **Do not use sharp objects to scrape the ice away.** Clean and dry the interior, close the door and turn on the power to the appliance. When the power has been restored the appliance will start to operate but it may take some time to achieve the pre-set operating temperature.

4.4. When the appliance is not in use

When the appliance is not in use for long periods, remove the contents, disconnect from the electricity supply, defrost, clean and dry, leaving the door open to prevent mould developing within the appliance.

4.5. Changing the Interior Light

Switch off the power supply to the appliance.
Remove the screw and plastic light cover.
Remove the bulb from the light unit.
Replace the bulb with a suitable replacement (Max 15W)
Refit the cover and switch the appliance back on.

4.6. Reversing the doors

The door opening can be reversed from “right hand hinged” to “left hand hinged” if required.

Warning! When reversing the door, the appliance must not be connected to the mains. Remove the plug from the mains beforehand.



- Remove Plastic cap from top hinge assembly.
- Remove the screws and upper-hinge assembly then lift and remove the fridge door away from the middle hinge assembly. Now remove the hinge pin from the upper hinge, turn the hinge over and refit the pin into the same hole.
- Remove the screws and middle hinge assembly then lift the freezer door away from the lower hinge assembly.
- Remove the screws, lower hinge and foot assembly. Now remove the hinge pin from the lower hinge, turn the hinge over and refit the pin into the same hole. Remove the left foot and refit on the right-hand side.
- Now fit the lower hinge and foot assembly to the left-hand side. Tighten the screws.
- Place the freezer door onto the lower hinge and then refit the middle hinge into the pre-drilled holes on the left-hand side of the cabinet. Tighten the screws.
- Now place the fridge door onto the middle hinge and then refit the upper hinge into the pre-drilled holes on the left-hand side of the cabinet. Tighten the screws.
- Ensure that both doors are correctly aligned and that they seal correctly. If the doors require further alignment, slacken off the screws, re-align the doors then tighten the screws.
- Refit the plastic cap.

4.7. What to do if something goes wrong

There is no power to the appliance:

- Check there is not a power cut
- Check there is power to the electric socket/appliance
Check the fuse in the plug (Must be 13 amp)
- Check that the thermostat has been set to position 1 or above
(see section 3.2.)

The compressor runs continuously:

- Are the doors closed correctly?
- Have large quantities of food recently been added to the appliance? – if yes, allow the interior temperature to recover
- Have the appliance doors been opened frequently? – if yes, allow the interior temperature to recover
- Check that the Thermostat Control has not been set to maximum

There is excessive frost/ice buildup:

- Ensure that the doors have been closed correctly
- Ensure that the door seals are clean and sealing correctly
- Check that the Thermostat Control has not been set

to maximum

The appliance is making a noise:

- Refer to Normal Operating Sounds, section 3.4
- Ensure that the appliance has been installed correctly (see section 1).

Section 5. Disposal and recycling of product

CORRECT DISPOSAL OF THIS PRODUCT



This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Precautions:

If the appliance is to be discard/recycled, you must remove the door. This will reduce the possibility of danger to children. The flammable foaming needs to be disposed of by professional company, person or your local council.

We decline liability for any damage or accident derived from any use of this product which is not in conformity with the instructions contained in this booklet.

Disposal of the appliance

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

The disposal should only be done through public collection points. Old refrigerators can contain CFC that destroy the ozone; contact the waste treatment centre nearest your home for more details on the correct procedures for disposal.

Insurance

**Any warranty provided with this product does not cover
loss of fridge/freezer content!**

Any claim for loss, damage, costs or expenses of an indirect or consequential nature including any economic loss or damage to foodstuffs or any other goods is excluded.

We recommend that you inspect your fridge/freezer regularly to check that it is working correctly, losses can result from deterioration following breakdown or accidental failure of the appliance, fuses, plugs or public electricity supply, these can be covered by your standard home insurance or might require extra cover. Check with your insurance provider.

Declaration of conformity

The manufacturer of the product/s described here-in, to which this description refers, declares on its role responsibility that the product/s meet the relevant fundamental safety, health and protection requirements of the relevant UK and EU requirements and that the corresponding test reports are available for examination by the relevant authorities and can be requested from the seller of the appliance, especially with regard to CE Declaration of Conformity issued by the manufacturer or with the manufacturers approval.

Moreover, the manufacturer declares that the parts of the appliance described in this user manual, which come into contact with fresh food, do not contain any toxic substances.

The manufacturer works constantly at the further development of all products. Please therefore bear this in mind as the design, set up and technology are subject